

Deutsch	ECTest11	ECTest11+	TDSTest11	TDSTest11+	SALTTest11
Bereich	.. to 2000 µS .. to 20.00 mS	.. to 200.0 µS .. to 2000 µS .. to 20.00 mS	.. to 2000 ppm .. to 10.00 ppt	.. to 200.0 ppm .. to 2000 ppm .. to 10.00 ppt	.. to 10.00 ppt
Auto-Cal.	Yes		No		

Bevor Anfang: Tauchen Sie die sensor ein paar Minuten in Alkohol oder wasser. Spülen Sie mit entionisiertem Wasser nach.

Bereich auswahl (ECTest11 / 11+, TDSTest11 / 11+)

Bei oben genannte testers kann ein **spezifiek** bereich eingestellt werden (**PU**re (0-200 µS)), **Lo**w (0-2000 µS), **Hi**gh (0-20 mS)) oder alle Bereichen (AUTO). Standard ist AUTO. Wenn ein anderes Bereich als AUTO gewählt ist, kann nur in das Bereich Kalibriert werden. Bereich auswahl:

- Schalten Sie das Gerät mit **ON/OFF** aus.
- Drücken Sie **°C/F**, gedrückt halten, Schaltet das Gerät mit **ON/OFF** ein.
- Lasst **°C/F** los. Bereich wählung ist aktiviert. Oben auf die Anzeige erscheint heutige bereich (PU/ LO/ HI/ AUTO, unter der maximum Wert von das Bereich).
- Drück wiederholt **HOLD** zum wählung des Bereichs. Wenn für 5 Sek. keine Taste gedrückt ist wird das Gerät die Kalibrierung bestätigen[CO]. Gerät geht im Messmodus.

Auto (AK) / Manueller (MK), Ein (1PK) / Mehr (MPK) Punt Kalibrierung

 
ECTest11 & 11+ haben automatische (AK) & Manueller (MK) kalibrierung, andere testers haben MK. Bei AK werden nur 84,1413µS & 12.88mS Leitfähigkeits Puffer automatisch erkend. Mit MK können sonstige Puffer genutzt werden (zb. 3.0mS). Kalibriert mehrere bereichen für bessere genauigkeit bei messungen in mehrere Bereichen. Das wählen von MPC hat keinen Gebrauch, wenn eine spezifische Messbereich gewählt ist. Rückstellung ist AK an und 1PC.

Auto (AK) oder Manueller (MK) Kalibrierung auswahl (nur ECTest 11 / 11+)

Anm.: Drücken Sie **°C/F** um nichts zu Ändern und weiter zu gehen mit das nächste menu.

Anm.: AK nur verfügbar bei ECTest11 & 11+. Für andere Modelle gehen Sie zur 1PC/MPC wählung hierunten.

- Schalten Sie das Gerät aus. Öffnen Sie den Deckel des Batteriefaches.
- Drücken Sie **INC**, Taste gedrückt halten, Schalten Sie das Gerät ein mit **ON/OFF**.
- Auf die Anzeige erscheint [A.CAL], und heutige einstellung [Yes] oder [No] blinkt. Lasst beide Tasten los
- Drücken Sie **INC** oder **DEC**, wählen Sie: [Yes], AK aktiv oder [No] AK aus (MK ist jetzt ein)
- Drücken Sie **HOLD/ENT** um die Auswahl zu bestätigen. Schirm zeigt [CO]. Tester geht zu 1PK / MPK modus.



Auswahl Ein (1PK) of Mehr (MPK) Punt Kalibrierung:

Bei ECTest11/11+, wiederhol den oben genannten schritten 1 bis 5, vor andere Modelle wiederhol den oben genannten Schritten 1 bis 3.

- Tester geht in 1PK / MPK wahl modus. Niedriger Schirm zeigt [1.Pnt], oben blinkt [Yes] oder [No].
 - Drücken Sie **INC** oder **DEC**, wählen Sie: [Yes], 1PK aktiv oder [No], MPK aktiv.
 - Drücken Sie **HOLD/ENT** um die Auswahl zu bestätigen. Schirm zeigt [CO] für enige sekunden.
- Anm.: Wenn Sie dieses Programm ohne bestätigung verlassen wollen drücken Sie **°C/F**

Kalibratie

- Öffnen Sie das Batteriefach. Schalten Sie das Gerät ein mit **ON/OFF**.
- Spülen Sie den Sensor mit ent-inisiertem Wasser, dann mit Eichlösung. Tauchen Sie den Sensor in die Eichlösung, schwenken Sie den Sensor leicht und warten Sie, bis sich die Anzeige stabilisiert
- Drücken Sie **INC** oder **DEC** für Kalibrier modus. Schirm zeigt [CAL] und die Zahl Kalibrierpunkten
 - In **AK** modus (Test11/11+) werden die Standaardlösungen gezeigt (84,1413µS oder 12.88mS). Drücken Sie **HOLD/ENT** zu bestätigung von die Kalibrierwert. Schirm zeigt [CO]. Für MPC verlangt das gerät den folgenden Puffer. Tauch den Sensor in die nächste Pufferlösung und druck auf **HOLD/ENT** zu bestätigen.
 - In **HK** modus; drücken Sie **INC** oder **DEC** um die obenste Wert an zu passen an die Wert auf die Pufferlösungflasche. Wartet 5 seknden. Schim zeigt [CO]. Für **MPK**: Tauch den Sensor in die nächste Lösung und gehe zu schritt 2.

Anm: bei der Kalibration zeigen auch alle Modelle Werte mit der Auflösungsgenauigkeit der +- Modelle an. Nach [CO] wird auf die normale Auflösungsgenauigkeit zurückgegangen.

Anm: Um den Kalibationsvorgang beenden, ohne den Kalibationswert zu übernehmen, so pressen Sie den „HOLD“-Knopf vor der automatische Bestätigung.

Anm: Wenn in HK modus für 5 sekunden kein Taste gedrückt wird, wird [CO] gezeigt, aber das Gerät ist NICHT Kalibriert!!

Anm: [Er.1] erscheint wenn die Lösung ±50% von der Voreinstellung abweicht

Anm: Wenn eine spezifische messbereich vorgewählt wurde, wird nur der Standard dieses Bereich im AK gezeigt.

Messung:

- Schalten Sie das Gerät ein (ON/OFF Taste).
- Tauchen Sie die Sensor in die Probe bzw. füllen Sie die Kappe (+-Serie), bewegt leicht und warten Sie bis sich die Anzeige stabilisiert.

HOLD-Funktion

- HOLD** drücken, um den Wert festzuhalten. Auf der Anzeige erscheint „HOLD“ .
- Freigabe durch nochmaliges **HOLD** drücken.

Auswahl des TDS-faktors (TDS-Modellen)

- Schalten Sie das Gerät ein (**ON/OFF**). Öffnet das Batteriefach.
- Drücken Sie **HOLD** , um den Wert festzuhalten.
- Drücken Sie wiederholt **INC** / **DEC** um den TDS modus zu öffnen
- Drücken Sie wiederholt **INC** / **DEC** bis der gewünschte TDS-faktor angezeigt wird. Der obere Wert zeigt den veränderten faktor an, der untere den zuletzt angewandten.
- Warten Sie 5 Sekunden bis die Anzeige [CO] bestätigt

Temperaturkalibrierung

- Schalten Sie das Gerät ein (**ON/OFF** Taste). Entfernen Sie die Abdeckung des Batteriefachs.
- Tauchen Sie die sensor in eine Lösung mit einer bekannten Temperatur und warten Sie ab, bis sich die Temperaturanzeige stabilisiert.
- Drücken Sie **INC** / **DEC**. Das Schirm zeigt [CAL] und kalibrierpunkten.
- Drücken Sie **°C/F**. Die obere Temperatur kann mann ändern, die untere den Temperaturwert auf Grund der alten Temperaturkalibrierung.
- Drücken Sie **INC** / **DEC** bis der richtige Temperaturwert angezeigt wird.
- Warten Sie 5 Sekunden, die Anzeige „CO“ bestätigt die neue Temperaturkalibrierung.

Anm: Der Kalibationswert kann ±5°C/ ±9°F von der Voreinstellung abweichen innerhalb das Bereich von 0 bis 50°C.

Anm: Nach Kalibrierung, ist Leitfähigkeit/TDS/Salzkalibrierung notwendig.

Zurücksetzen auf die Fabrikseinstellung

- Schaltet die Tester aus
- Drück auf **HOLD/ENT** (Taste gedrückt halten), Schaltet das Gerät ein mit ON/OFF.
- Lasst **HOLD/ENT** loss, unter word [rSt] gezeigt, oben blinkt [nO].
- Drück auf **INC** / **DEC**: [nO] nicht Zurücksetzen; [YES] setzt einstellung Zurück.
- Drücken Sie **HOLD/ENT** zu bestätigen. Schirm zeigt [CO].

Wartung der Elektrode

- Spülen Sie die Sensor mit ent-ionisiertem Wasser und wischen Sie trocken bevor Sie sie aufbewahren. Bei +-Modellen entfernt den weißen Plastikeinsatz – setzt aber nachher wieder ein. Säubern Sie die Oberfläche nie mit einer harten Substanz.

- Für bessere und schnellere Messungen tauchen Sie die Elektrode für 10-15 Minuten in Alkohol und spülen Sie sie anschließend mit de-ionisiertem Wasser.



Auswechseln der Batterien


- Öffnen Sie den Deckel des Batteriefaches.

- Entfernen Sie die alten Batterien und lege 4 neue LR44 oder A76 ein. Beachten Sie die Polarität..

Auswechseln der Elektrode wenn nicht mehr kalibriert werden kann oder die Messwerte in Standardlösungen schwanken.

- Schrauben Sie den gerippten Teil des Gehäuses (Kragen) gegen den Uhrzeigersinn auf (Abb. A). Bewahren Sie den Kragen und den O-Ring auf.
- Ziehen Sie das alte Elektrodenmodul vom Tester weg.
- Richten Sie das neue Modul so aus, dass es in die 4 Halterungen des Testers passt (Abb. B). Beachten Sie auch, dass sich die Drahtstifte auf der Testerseite und das kleine Verbindungsmodul am Elektrodenmodul auf derselben Höhe befinden.
- Drücken Sie das neue Modul vorsichtig in die Halterungen.
- Schieben Sie den kleineren O-Ring auf das Elektrodenmodul.
- Schieben Sie den Kragen über das Modul und drehen Sie es im Uhrzeigersinn fest.

Achtung: Nach einem Elektrodentausch müssen Sie den Tester neu kalibrieren.

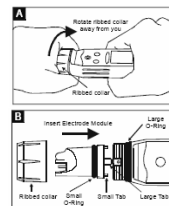

INSTRUCTION MANUAL

EC/TDS/SALT Testr

Large Screen Waterproof Multi Range
Conductivity/TDS/Salt Tester
with Temperature Display

Introduction

Thank you for selecting microprocessor-based waterproof EC / TDS / SALT tester with large dual line display. You have one of the following models:

• ECTestr11 • ECTestr11+ • TDSestr11 • TDSestr11+ • SALTestr11

Non-plus models (ECTestr11, TDSestr11 & SALTestr11) come with user-replaceable two-pin type sensor and have many user friendly features such as Dual-range measurement, the Hold function, Automatic Temperature Compensation (ATC) and Self-Diagnostic Messaging capabilities.

Plus models (ECTestr11+ & TDSestr11+) come with the user-replaceable cup type sensor and have additional features such as Multi-range measurement, up to 3-point calibration and higher resolution measurement.

Before You Begin

Remove the electrode's protective cap. Soak the electrode for a few minutes in alcohol to remove any oil stains on the electrodes which will affect the accuracy of the tester. Rinse thoroughly with de-ionized water and shake off dry.

Key Functions

Key	Function
	- Power on and off the tester (The tester automatically switches off, if no button is pressed for 8.5 seconds)
	- In measurement mode, temperature reading switches between Celsius & Fahrenheit - In calibration mode, switches the tester to temperature calibration mode - In temperature calibration mode, exits calibration mode without confirming calibrated values
	- In measurement mode, switches to hold mode freezing the display. - In hold mode, switches back to measurement mode - In manual calibration and temperature calibration modes, exits calibration mode without confirming calibrated values - In range selection mode, selects a range
	- In measurement mode, enters calibration mode - In calibration mode, adjusts the calibration values - In hold mode, enters TDS factor setting mode - In TDS factor setting mode, adjusts TDS factor

Note: INC & DEC keys are located inside the battery compartment. Refer figure 1.

Note: For ECTestr11 & ECTestr11+ models, the caption of HOLD key is 'HOLD/ENT'

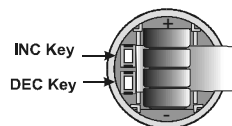


Figure 1: Battery compartment

Switching On

Press **ON/OFF** key to switch on the tester. The LCD shows the power-up sequence as illustrated in Figure 2. When the tester is on, if you do not press a key for 8.5 minutes, the tester automatically switches off to conserve batteries.

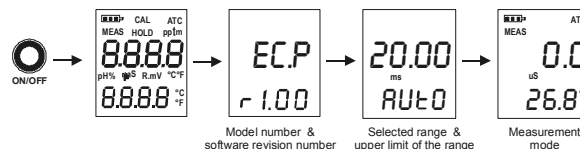


Figure 2: Power Up Sequence

Range Selection

Depending on the selected model, you can set the tester to limit its reading to a particular measuring range (PU, LO or HI) or full scale (AUTO). The default setting is AUTO. When you select a range other than AUTO, the tester can be calibrated only for that particular range. If you try to measure a sample which has a higher conductivity/TDS value than that of the selected measuring range, the LCD shows 'OR' error message. Refer **Specifications** section for available ranges of the selected model.

To select a range:

1. Switch off the tester. Press and hold **°C/°F** key and then switch on the tester using **ON/OFF** key. Release **°C/°F** key.
2. The tester goes to range selection mode. The LCD shows the currently selected Range (the default is AUTO) in the lower display. The upper display shows the maximum possible reading for the selected range. Press **HOLD** key repeatedly until you see the required range (PU, LO or HI).

Note: If no key is pressed within 5 seconds, LCD shows power-up sequence and tester goes to measurement mode.

3. The tester automatically confirms the last selection if no key is pressed for 5 seconds. Upper display momentarily shows 'CO'. The LCD shows power-up sequence and the tester goes to measurement mode.

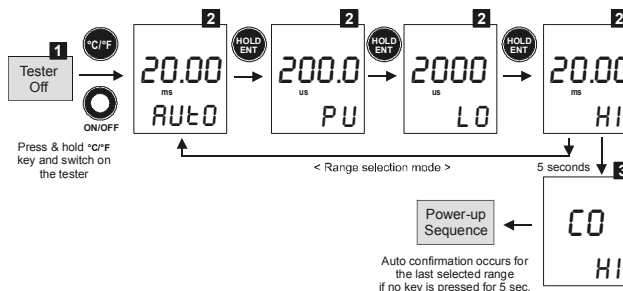


Figure 3: Range selection sequence from AUTO to HI for ECTestr11+

Measurement

1. Press the **ON/OFF** key to switch on the tester. The 'MEAS' indicator appears when the tester is in measurement mode.
2. Dip the electrode into the test solution making sure that it is fully immersed. Stir to clear any trapped air bubbles from the electrode and let the reading stabilize. For plus models, you can opt for the cup style measurement by filling the electrode cup with sample of test solution.

Note: The LCD indicates 'Or' (over range) if the reading is outside the selected range. If this occurs, select an appropriate range to suit the reading.

3. The upper display shows the main reading (conductivity/TDS/Salt) of the solution, automatically temperature compensated (ATC) to normalized temperature of 25°C. The lower display shows the temperature of the solution.

HOLD Function

This feature lets you freeze the display for a delayed observation.

1. Press **HOLD** key to freeze the measurement. The tester goes to hold mode and 'HOLD' indicator is displayed in LCD. The measurements are frozen and the 'MEAS' indicator disappears.
2. Press **HOLD** key again to release the measurement. The 'HOLD' indicator is no longer displayed. The tester goes back to measurement mode.

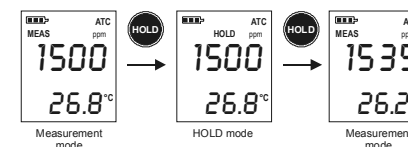


Figure 4: HOLD Function

Temperature Unit of Measurement Selection

This feature lets you set the unit of measurement of temperature to either Celsius (°C) or Fahrenheit (°F).

When the tester is in the measurement mode, press **°C/°F** button. The temperature display toggles between the Celsius and Fahrenheit reading.

 


Figure 5: Temperature unit of measurement selection

About Calibration

To ensure higher accuracy, the tester must be calibrated on a regular basis. Calibration can be manual or automatic (only for ECTestr11 & ECTestr11+); calibration can be 1-point or multi-point. You can choose any combination of the above two options for calibration. If you calibrate the tester for 1-point, the calibration is applied for all the measuring ranges. In applications where you need higher accuracy, and when you intend to measure values in more than one range, it is recommended to select multi-point calibration.

Selection of Automatic or Manual Calibration

ECTestr11 & ECTestr11+ models support both automatic & manual calibration while all other models have to be calibrated manually. In automatic calibration, the tester automatically detects and verifies known conductivity standard solutions (84uS, 1413uS & 12.88mS) . In manual calibration, you can use non-standard solutions which may be specific for your application.

The factory default is Automatic calibration (Auto). You can enable or disable automatic calibration as described below (for only ECTestr11 & ECTestr11+ models).

Selection of 1-point or Multi-point Calibration

The factory default is 1-point Calibration. For higher accuracy, it is recommended that you calibrate the tester for multiple ranges if you intend to measure values in multiple ranges. You can enable or disable multi-point calibration as described below.

Note: If you have selected a specific measuring range for the tester, selecting multi-point calibration has no meaning, as the tester can only be calibrated for 1-point for the selected range. Set the tester to 'AUTO' measuring range if you wish to calibrate multi-points.

To enable/disable auto calibration and multi-point calibration:

1. Switch off the tester. Press and hold **INC** key and then switch on the tester using **ON/OFF** key.
2. The tester goes to auto calibration selection mode. The lower display shows 'A.CAL' and the upper display blinks the current choice ('Yes' or 'No').

Note: This mode is available only for ECTestr11 & ECTestr11+ models. For other models, go directly to 1-point selection mode, described in step 4 below.

Press **INC** or **DEC** key to select 'Yes' (to enable auto calibration) or 'No' (to disable auto calibration)

Note: Press **°C/°F** key, if you wish to skip this setting without confirming changes.

Note: Press **°C/°F** key twice, if you wish to return to measurement mode without confirming changes.

3. Press **HOLD/ENT** key to confirm the selection. The display shows 'CO'.
4. The tester goes to 1-point calibration selection mode. The lower display shows '1.Pnt' and the upper display blinks the current choice ('Yes' or 'No'). Press **INC** or **DEC** key to select 'Yes' (to enable 1-point calibration) or 'No' (to disable 1-point calibration, i.e. to enable multi-point calibration).

Note: Press **°C/°F** key if you wish to skip this setting without confirming.

5. Press **HOLD/ENT** key to confirm the selection. The display shows 'CO' for few seconds and then shows power-up sequence. The tester goes to measurement mode.

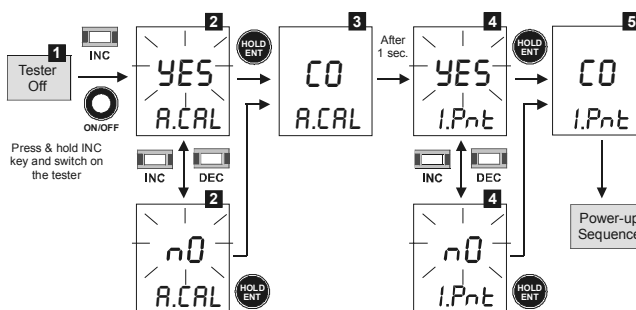


Figure 6: Selecting auto calibration & 1-point calibration for ECTestr11+

Auto Calibration

Auto calibration feature is available only for conductivity in ECTestr11 & ECTestr11+ models. Make sure that 'auto calibration' is enabled as described in the previous section. Auto calibration is suitable if you use standard conductivity solutions for calibration process.

If you selected 1-point calibration, you need to choose a calibration standard corresponds to the selected measuring range of the tester listed below. If you have selected multi-point calibration & AUTO measuring range, you can choose any of the calibration standards listed below. During auto calibration, the tester recognizes the calibration standard if its value is within 50% tolerance. For multi-point calibration (with AUTO measuring range), the tester automatically scans through all possible calibration points until all of them are calibrated.

Selected Measuring Range	Calibration Standard
PU (0 to 200.0 uS/cm)	84 uS
LO (0 to 2000 uS/cm)	1413 uS
HI (0 to 20.00 mS/cm)	12.88 mS
AUTO	84 uS, 1413 uS, 12.88 mS

To prepare calibration standards:

Use fresh calibration standard solutions listed in the above table. Prepare each solution in two beakers - one for rinsing and the other for calibration. Rinse the electrode in de-ionized water before calibration.

To begin automatic calibration:

1. Switch on the tester. Make sure the tester is in measuring mode. Press **INC** or **DEC** key to enter conductivity calibration mode.
2. 'CAL' indicator appears in LCD. The display briefly shows 'CAL' and the number of points the tester will be calibrated.
3. The upper display shows the conductivity reading and the lower display sequentially shows calibration standard values 1413 uS & 12.88 mS (for ECTestr11) or 84 uS, 1413 uS & 12.88 mS (for ECTestr11+) if the measuring range of the tester is set to AUTO.

Note: If you have selected a specific measuring range for the tester, the lower display shows the corresponding calibration standard value that matches the selected measuring range.

4. Rinse the electrode with the calibration standard that you intend to calibrate and then dip the electrode in the other beaker with same calibration standard. Swirl gently to create a homogenous sample and allow time for the reading to stabilize.

Note: For multi-point calibration, the lower display automatically locks at the calibration standard value that closely matches. The tolerance range is $\pm 50\%$ of the calibration standard. The tester shows error message 'Er.1' if you try to calibrate with a solution whose conductivity is outside the tolerance range.

Note: Press **INC** or **DEC** key if you wish to exit from auto calibration, during any of the above steps.

5. Press **HOLD/ENT** key to confirm the calibration. LCD shows 'CO' for 2 seconds. The calibration is complete and the tester returns to measurement mode, if this is a 1-point calibration.
6. For multi-point calibration, the tester goes to the next calibration point, lower display showing next calibration standard values. Rinse the electrode in de-ionized water and repeat step 4 & 5 to continue calibrating with next calibration standard solution.

Note: The tester shows error message 'Er.0' and returns to measuring mode if the temperature of the calibration solution is not within 0°C to 50°C.

Note: The tester shows error message 'Er.1' if you press **HOLD/ENT** key before the tester recognizes the calibration standard.

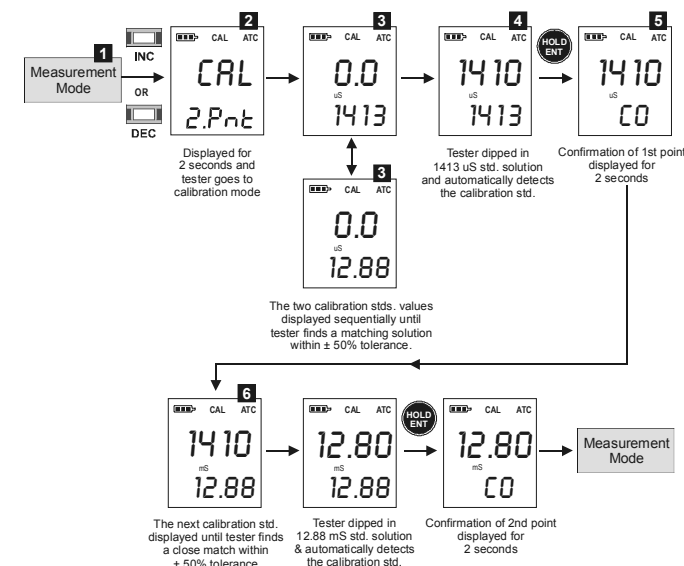


Figure 7: Two-point automatic calibration sequence for ECTestr11

Manual Calibration

In manual calibration, the tester allows 1-point calibration for each measuring range. You can use customized calibration solutions with known conductivity/TDS values to calibrate the tester. The following table shows acceptable conductivity/TDS ranges of calibration solutions for each measuring range. Make sure your calibration solutions are within the given ranges.

Selected Measuring Range	Acceptable Calibration Standard Range	
	Conductivity	TDS/Salt
PU	2.0 - 200.0 uS/cm	2.0 - 200.0 ppm
LO	200 - 2000 uS/cm	200 - 2000 ppm
HI	2.00 - 20.00 mS/cm	1.00 - 10.00 ppt
AUTO	Select a calibration standard nearer to application sample	

To prepare calibration standards:

Use fresh calibration solutions. Measure conductivity/TDS values of the solution with a meter known to be accurate. Prepare each solution in two beakers - one for rinsing and the other for calibration. Rinse the electrode in de-ionized water before calibration.

To begin manual calibration:

- Switch on the tester. Make sure the tester is in measuring mode. Rinse the electrode with the calibration standard that you intend to calibrate and then dip the electrode in the other beaker with same calibration standard. Swirl gently to create a homogenous sample and allow time for the reading to stabilize.
- Press **INC** or **DEC** key to enter calibration mode. The 'CAL' indicator appears in LCD. The display briefly shows 'CAL' and the number of points the tester will be calibrated.
- The upper display shows the measured conductivity/TDS reading of the solution based on previous calibration (if any) and the lower display shows the default (uncalibrated) conductivity/TDS reading.

Note: The tester shows error message 'Er.1' :

- If the reading is over range (Or) of selected measuring range of the tester ,
- If the default (uncalibrated) reading is not within the acceptable calibration standard range.

Use **INC** and **DEC** keys to adjust the upper display to the correct conductivity/TDS value of the calibration solution.

Note: The calibration adjustment window is $\pm 50\%$ from the default reading.

Note: If you do not press **INC** or **DEC** key within 5 seconds, the tester shows the confirmation 'CO' and returns to the measurement mode. However, the tester is not calibrated to new values yet. The old calibration is still active. If this happens, press **INC** or **DEC** key once again to enter calibration mode.

- Wait for 5 seconds for the tester to automatically confirm the calibration by displaying 'CO' and return to the measurement mode.

Note: To exit calibration mode without confirming the calibration, press **HOLD/ENT** key before the automatic confirmation takes place.

Note: The tester shows error message 'Er.0' and returns to measuring mode if the temperature of the calibration solution is not within 0°C to 50°C.

- For multi-point calibration rinse the electrode in de-ionized water and repeat step the above steps with another standard solution.

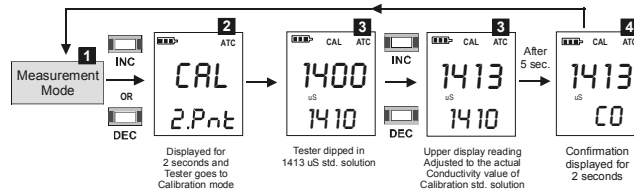


Figure 8: One-point manual calibration sequence for ECTestr11+

TDS Factor Setting

TDS factor is only applicable for TDSTestr11 & TDSTestr11+ models.

The factory default TDS factor is 0.71. You can adjust the TDS factor to suit different samples of your applications.

To change TDS factor:

- Switch on the tester. Make sure the tester is in measurement mode. Press **HOLD** key to bring the tester to the HOLD mode.
- Press **INC** or **DEC** key to enter the TDS factor setting mode.
- The upper & lower displays of LCD show the last configured TDS factor. The upper display is adjustable. Use the **INC** or **DEC** key to adjust the TDS factor. The adjustable range is 0.4 to 1.0

Note: If you do not press **INC** or **DEC** key within 5 seconds, the tester shows the confirmation 'CO' and returns to measurement mode.

- Wait for 5 seconds for the tester to automatically confirm the new setting by displaying 'CO' and return to the measurement mode.

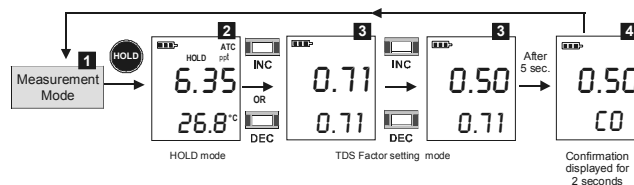


Figure 9: TDS Factor setting

Temperature Calibration

Temperature calibration need not be performed every time, unless the temperature reading differs from that of an accurate thermometer. If temperature calibration is performed, Conductivity/TDS/Salt calibration is mandatory.

- Switch on the tester. Make sure the tester is in measuring mode. If required, press **°C/°F** key to select the desired unit of measurement for temperature (Celsius or Fahrenheit). Dip the tester into a solution of known temperature and allow time for the temperature reading to stabilize.
- Press **INC** or **DEC** key to bring the tester to the calibration mode. 'CAL' indicator appears in LCD. Immediately press **°C/°F** key to switch to the temperature calibration mode.

Note: When you enter calibration mode, if the conductivity/TDS/salt reading is outside the specified range (Or), the tester shows 'Er.1' error message. You can still proceed to the temperature calibration mode by pressing **°C/°F** key immediately. If the **°C/°F** key is not pressed within 2 seconds, the tester exits the calibration mode and returns to the measurement mode.

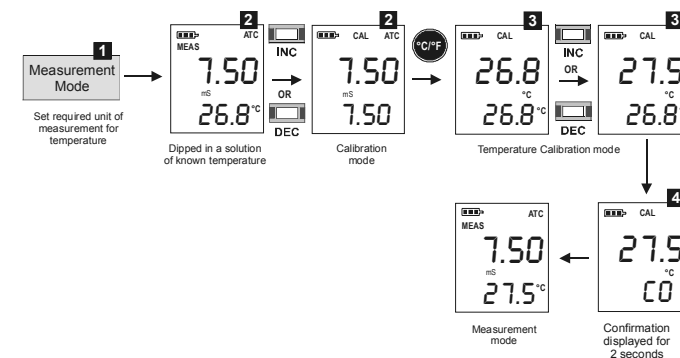


Figure 10: Temperature calibration sequence

- The upper display shows the measured temperature reading based on the last set offset (if any) and the lower display shows the default (uncalibrated) temperature reading based on factory settings. Use **INC** and **DEC** keys to adjust the upper temperature reading to the known temperature value of the solution.

Notes: The temperature adjustment window is $\pm 5^\circ\text{C}$ ($\pm 9^\circ\text{F}$) from the default reading.

- Wait for 5 seconds for the tester to automatically confirm the temperature calibration value by displaying 'CO' and return to the measurement mode.

Note: To exit temperature calibration mode without confirming the calibration, press **°C/°F** key or **HOLD/ENT** key before the automatic confirmation takes place.

Note: The tester shows error message 'Er.0' and returns to measuring mode if the temperature of the solution is not within 0°C to 50°C.

Reset

Reset option allows you to restore the calibration and other parameters back to factory default settings.

1. Switch off the tester. Press and hold the **HOLD** key and then switch on the tester using **ON/OFF** key. Release **HOLD** key.
2. The lower display shows 'rSt' (reset) and the upper display blinks 'No'. Use **INC** or **DEC** key to select 'Yes' (to proceed with resting) or 'No' (to quit without resetting).

Note: Press **°C/°F** key if you wish to skip to measurement mode without making any selection.

3. Press **HOLD** key to confirm your selection. LCD shows 'CO'. If 'Yes' is selected, the tester resets to its factory default values as listed below. LCD shows power-up sequence and tester goes to measurement mode.

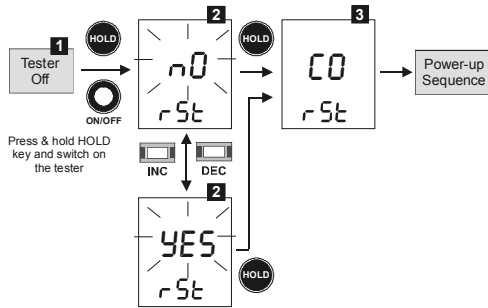


Figure 11: Resetting sequence

Parameter	Factory Default
User calibration (conductivity/TDS/salt)	(Reset)
Temperature unit of measurement	Celsius (°C)
Temperature offset	0
Auto calibration (for ECTest11 & ECTester11+)	Enable
1-point calibration	Enable
Conductivity calibration factor (for ECTest11 & ECTester11+)	1.0
TDS factor (for TDSTest11 & TDSTester11+)	0.71

Changing Batteries

Replace the batteries when the low battery indicator starts blinking.

1. Open the battery compartment lid (with attached lanyard loop).
2. Remove old batteries by pulling plastic ribbon. Replace with fresh ones. Note polarity as shown in figure 11.

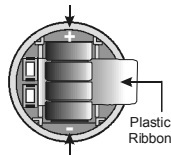


Figure 11: Battery compartment

Electrode Maintenance

1. Always keep the sensor electrodes clean. Rinse the electrodes with de-ionized water and wipe them dry with clean cloth before storing with its protective cap. For cup type electrodes, remove the white plastic cup and insert to thoroughly clean viscous solutions. Never scratch electrodes with a hard substance.
2. For better performance, soak the electrode in alcohol for 10 to 15 minutes and rinse with de-ionized water before starting any measurement process. This is to remove dirt and oil stains on the electrode which may affect the accuracy of the measurements.

Electrode Replacement

When the tester fails to calibrate or gives fluctuating readings in calibration standards, you need to change the electrode module. You can replace the electrode module at a fraction of the cost of a new tester.

1. With dry hands, grip the ribbed tester collar with electrode facing you. Twist the collar counter clockwise (see Figure 13-A). Save the ribbed tester collar and O-ring for later use.
2. Pull the old electrode module away from the tester.
3. Align the four tabs of the new electrode module so that they match the four slots on the tester (see Figure 13-B).
4. Gently push the module into the slots to sit it in position. Push the smaller O-ring fully onto the new electrode module. Push the collar over the module and thread it into place by firmly twisting clockwise.

Note: It is necessary that you recalibrate the tester prior to measurement after an electrode replacement.

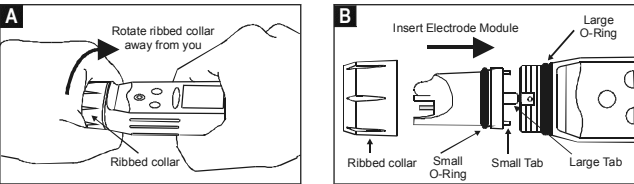


Figure 13: Removing collar & inserting electrode

Self-Diagnostic Messages

Low battery indicator		3 Bars indicates Battery is full (100%)
		2 Bars indicates 50% of the battery life is left
		1 Bar indicates 25% of the battery life is left
Over range / Under range signal		Blinking battery casing indicates the need to replace batteries with fresh ones as specified by manufacturer
	Or / Ur (Still)	The sensor electrodes short circuited Replacement sensor is not connected properly to the tester during sensor replacement
	ATC / Or / Ur (Blinking)	Measured value or temperature value exceeds the specified maximum or minimum value
Error Message	Er0	Blinking 'ATC', 'Or' or 'Ur' indicates that there is a short or open circuit at the built in temperature sensor
	Er1	Calibration error due to temperature value not within the specified range Calibration error due to Conductivity/TDS/Salt value not within the specified calibration standard range

Accessories

Item	Order Code
ECTESTR, TDSTESTR & SALTSTR replacement sensor	TDSENSOR
ECTESTR+ & TDSTESTR+ replacement sensor	TDSENSORPLUS

Warranty

The waterproof testers are warranted to be free from manufacturing defects for 1 year and electrode module for 6 months, unless otherwise specified. If repair, adjustment or replacement is necessary and has not been the result of abuse or misuse within the time period specified, please return the tester - freight prepaid - and correction will be made without charge. Out of warranty products will be repaired on a charge basis.

Return of Items

Authorization must be obtained from your distributor before returning items for any reason.

When applying for authorization, please include information regarding the reason the item(s) are to be returned.

Note: Eutech Instruments/Oakton Instruments reserve the right to make improvements in design, construction and appearance of products without notice. Prices are subject to change without notice.

Specifications

Model	ECTest11	ECTest11+	TDSTest11	TDSTest11+	SALTTest11
Range:	PU LO 0 to 2000 uS/cm HI 0 to 20.00 mS/cm	0 to 200.0 uS/cm 0 to 2000 uS/cm 0 to 20.00 mS/cm	- 0 to 2000 ppm 0 to 10.00 ppt	0 to 200.0 ppm 0 to 2000 ppm 0 to 10.00 ppt	- 0 to 10.00 ppt
Resolution:	PU LO 10 uS/cm HI 0.10 mS/cm	0.1 uS/cm 1 uS/cm 0.01 mS/cm	- 10 ppm 0.10 ppt	0.1 ppm 1 ppm 0.01 ppt	- -
Accuracy	± 1% of Full Scale				
Calibration Type	Auto or Manual	Auto or Manual	Manual	Manual	Manual
Calibration Points	1 or 2 points	1, 2 or 3 points	1 or 2 points	1, 2 or 3 points	1 point
Calibration Window	± 50% from each point				
Calibration	PU Standard Range:LO (Manual) HI	- 200 - 2000 uS/cm 200 - 2000 uS/cm 2.00 - 20.00 mS/cm	2.0 - 200.0 uS/cm 200 - 2000 uS/cm 1.00 - 10.00 ppt	2.0 - 200.0 ppm 200 - 2000 ppm 1.00 - 10.00 ppt	- -
Sensor Type	Two-pin	Cup	Two-pin	Cup	Two-pin
TDS Factor	-	-	0.4 to 1.0 (Default 0.71)	-	-
Temperature	Range in °C Range in °F Resolution Accuracy Calibration point Calibration Window ATC Temp Coefficient				
Normalization Temp	25.0°C				
Auto Off	8.5 minutes after last key press				
Operating Temp	0 to 50°C				
Power Battery	4 X 1.5V"A76" micro alkaline battery				
Battery Life	>150 hrs				
LCD Display	Custom Dual Display27mm(H)X21mm(W)				
Dimensions	Tester: 16.5 cm X 3.8 cm; 90g				
Weight	Boxed: 22cm X 6cmX 5cm; 170 g				